


PNEUMATIC WHIRLPOOL ON/OFF

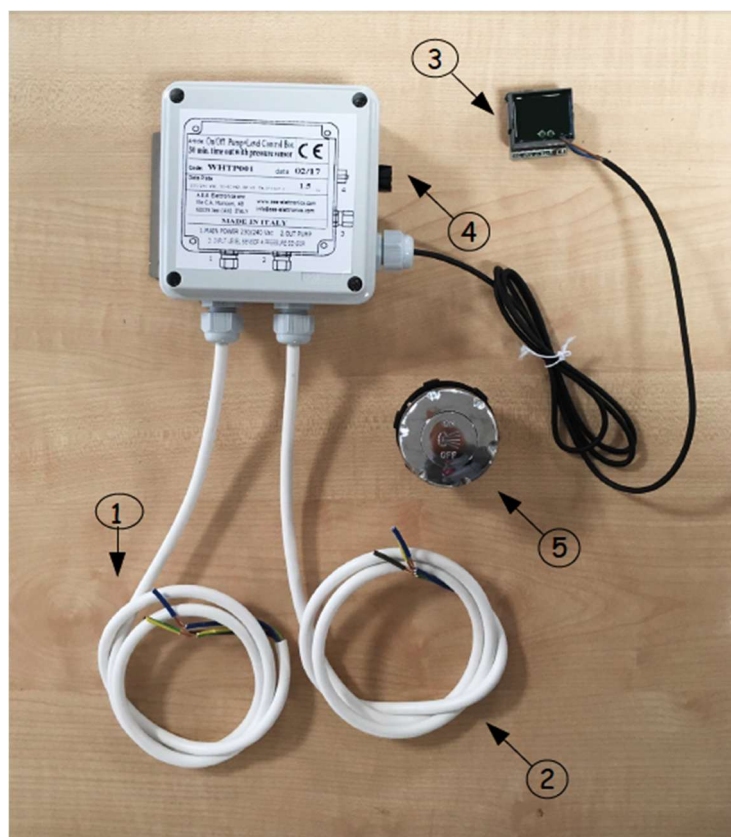

PRODUCT DESCRIPTION

1. Main Power 230Vac
2. Out Pump
3. Sensor Level
4. Pressure Sensor
5. Pressure Botton (item not supplied)

OPERATION

Connect the electronics to the mains power supply.

When the level sensor detects the presence of water, pressing the pneumatic button, the whirlpool will start with a maximum time of 30 minutes.

If the level sensor does not detect the presence of water the whirlpool will not start until the correct water level has been restored again.